


ASUS ROG STRIX RX580/RX480 GPU Water Block

BS-ASSRX580-PA




Remove the red position screw

①

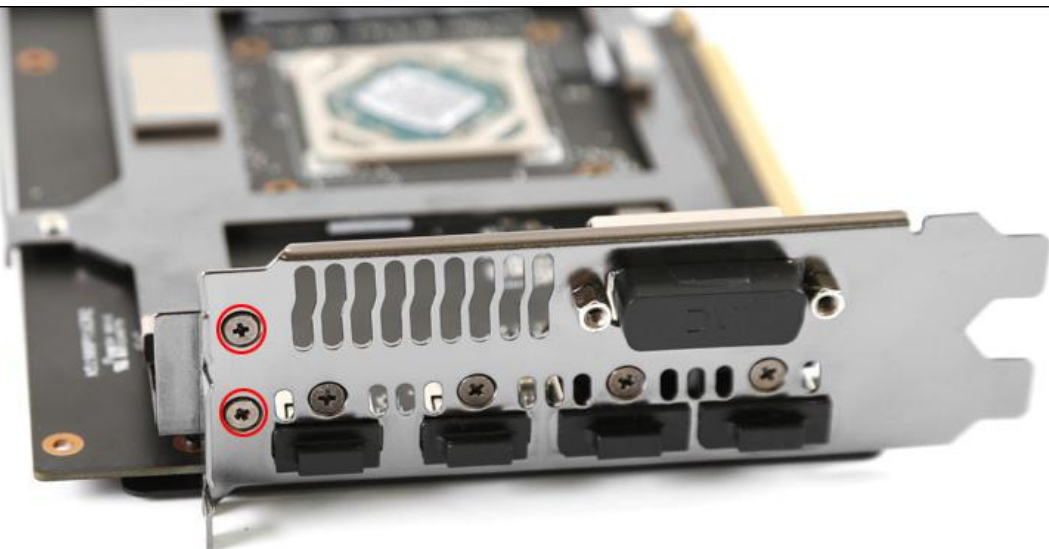


Remove the two screws at the same time

①-②

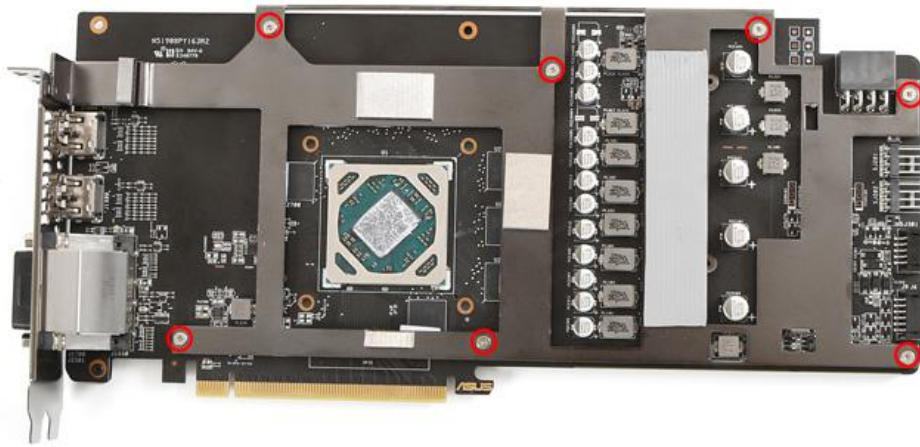


Remove the red position screw
Clean up and reapply GPU core thermal grease

②

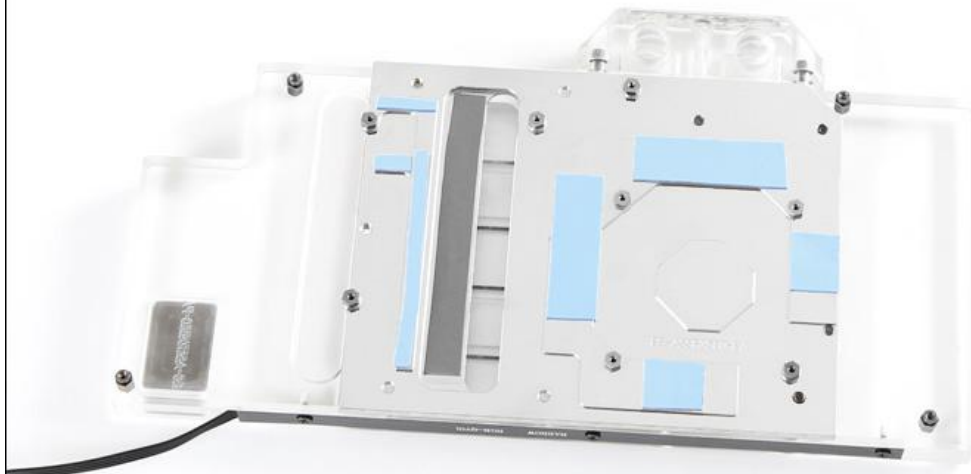


In the water block floor with good thermal grease

③

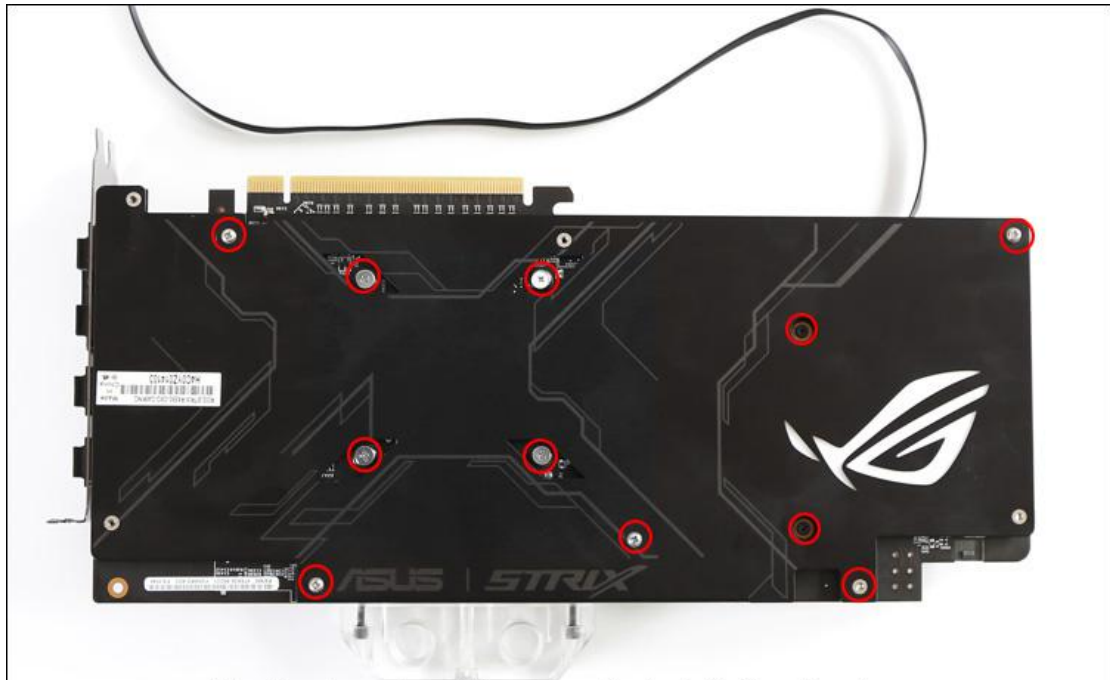

Attention to red position screw for installation drawing

④

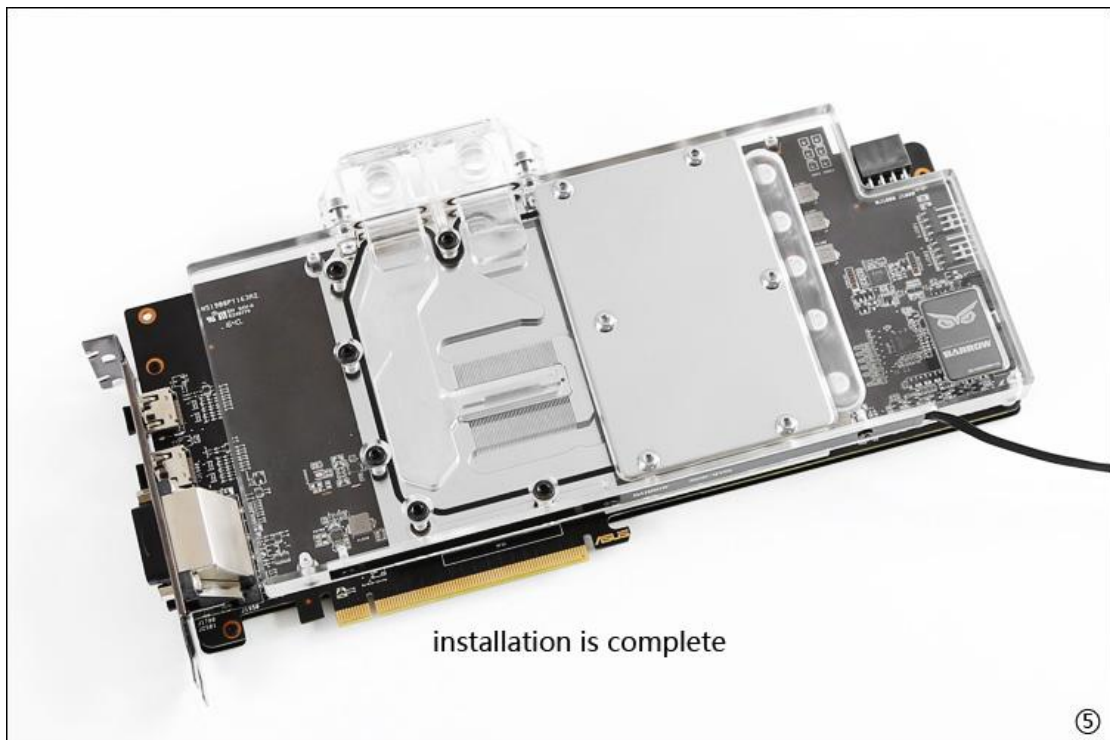

installation is complete

⑤